

# *the Citrus Press™ Pro*

SCP800



EN QUICK GUIDE

# **Sage®**



## Contents

2	Sage® Recommends Safety First
5	Components
6	Assembly
7	Care & Cleaning
7	Troubleshooting
7	Guarantee

## SAGE® RECOMMENDS SAFETY FIRST

**At Sage® we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.**

## IMPORTANT SAFEGUARDS

### READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Remove and safely discard any packaging materials before first use.
- To eliminate a choking hazard for young children, safely discard the protective cover fitted to the power plug.
- This appliance is for household use only. Do not use the appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- Fully unwind the power cord before operating.
- Position the appliance on a stable, heat resistant, level, dry surface away from the edge and do not operate on or near a heat source such as a hot plate, oven or gas hob.
- Vibration during operation may cause the appliance to move.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- Always ensure the appliance is turned OFF, unplugged at the power outlet and has been allowed to cool before cleaning, attempting to move or storing.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.

- Do not use the appliance if the power cord, plug, or appliance becomes damaged in any way. If damaged or maintenance other than cleaning is required, please contact Sage Customer Service or go to [sageappliances.com](http://sageappliances.com)
- Any maintenance other than cleaning should be performed by an authorised Sage® service centre.
- Children should not play with the appliance.
- Cleaning of the appliance should not be carried out by children unless they are 8 years or older and supervised.
- The appliance and its cord should be kept out of reach of children aged 8 years and younger.
- The installation of a residual current safety switch is recommended to provide additional safety when using all electrical appliances. Safety switches with a rated operating current not more than 30mA are recommended. Consult an electrician for professional advice.
- Always ensure the appliance is properly assembled before use. The appliance will not operate unless properly assembled.
- Do not use the appliance on a sink drain board.
- Keep hands, fingers, hair, clothing as well as spatulas and other utensils away from moving or rotating parts during operation.
- Do not use the appliance for anything other than food and/or beverage preparation.
- In order to avoid the possible hazard of the appliance starting by itself due to inadvertent resetting of the overload protection, do not attach an external switching device (such as a timer) or connect the appliance to a circuit that can regularly switch the appliance on and off.
- Carefully read all instructions before operation and save for future reference.
- The appliance can be used by persons with reduced physical or mental capabilities or a lack of experience and knowledge, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance shall not be used by children.
- Allow the motor to rest for 1 minute between each use.
- Avoid placing hands or fingers near the hinge of the juice press arm when operating or moving the unit.



The symbol shown indicates that this appliance should not be disposed of in normal household waste.

It should be taken to a local authority waste collection centre designated for this purpose or to a dealer providing this service. For more information, please contact your local council office.



To protect against electric shock, do not immerse the power plug, cord or appliance in water or any liquid.

**SAVE THESE INSTRUCTIONS**



## Components



- |   |   |
|---|---|
| A. Juice Press Arm                          | G. Fruit Dome   |
| B. Stainless Steel Filter (dishwasher safe) | H. Die Cast Stainless Steel Juicing Cone (dishwasher safe). |
| C. Motor                                    | I. Juice Collector (dishwasher safe).                       |
| D. ON/OFF Button (not shown)                | J. Juice Spout  |
| E. Cord Storage                             | K. Double Stage Switching System                            |
| F. Soft Grip Handle                         |   |

**CE** Rating Information  
220-240V~50/60Hz 100-120W



# Assembly

## ASSEMBLING THE JUICER


1. Pull the juice press arm up, away from the motor base, until fully extended.



2. Place the juice collector onto the drive shaft on top of the motor base, ensuring the juice spout fits into the semi-circular groove at the front of the motor base.



3. Insert the filter into the juice collector, aligning the indent with arrow in the bottom of the filter over the corresponding tab with arrow in the juice collector.

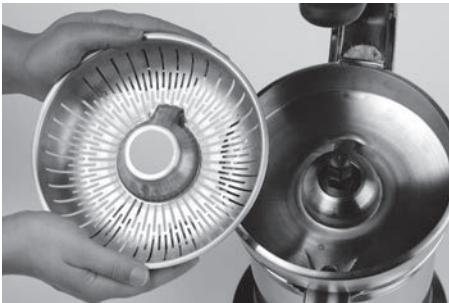

4. Place the juicing cone onto the drive shaft and press down lightly to lock the cone into position.



5. To insert the fruit dome, place it into the hole on the underside of the juice press arm. The fruit dome is magnetic and will stick into place.



6. Ensure the anti-drip juice spout is pushed down into the pouring position.





## Care & Cleaning

- Always ensure that the juicer is turned OFF at the ON/OFF switch and the plug is removed from the power outlet before cleaning, disassembling, assembling and storing the appliance.
- Follow these instructions to clean all surfaces or parts that come into contact with food during juicing.
- For easy cleaning immediately after each use rinse removable parts under warm water to remove wet pulp. Allow parts to air dry before reassembling.
- For thorough cleaning after disassembling the appliance, all removable parts should be washed in hot soapy water or on the top shelf of the dishwasher. The base and juice press arm should be wiped with a soft, damp cloth. All parts should be dried thoroughly before reassembling.
- Store the cleaned and reassembled juicer in an upright position in a cool, dry place. Do not place any items on top of the juicer while stored.
- Rinse or wash all removable parts immediately after use. Dried citrus pulp is difficult to remove and may stain. If any staining does occur, wipe the discoloured part(s) with undiluted dishwashing liquid, rinse and dry thoroughly.
- Do not soak the filter or other removable parts in bleach. Never immerse the motor base in water or any other liquid. Do not use harsh abrasives.



## Troubleshooting

### POSSIBLE PROBLEM

### EASY SOLUTION

#### Will not work

- Switch not in the ON position.
- Juice press arm not lowered.
- Juicing cone or fruit dome not assembled properly.
- Filter not assembled properly.
- Motor overload protection may have operated (see below).

#### Motor Overload Protection

- The juicer is fitted with an overload protector to prevent damage to the Motor. If the Motor suddenly stops working after heavy or long periods of use, turn OFF at the ON/OFF button, unplug from the wall and allow the unit to cool for 15 minutes. Once the unit is cooled you will be able to use the juicer again as normal.  
NOTE: The unit MUST be unplugged from the supply to allow the protector to reset.
- Despite this overload protector we suggest juicing in smaller batches in order to protect the Motor.



## Guarantee

### 2 YEAR LIMITED GUARANTEE AND 5 YEAR LIMITED MOTOR GUARANTEE

Sage Appliances guarantees this product for domestic use in specified territories for 2 years for all parts of the product and 5 years for the product's motor from the date of purchase against defects caused by faulty workmanship and materials.

During this guarantee period Sage Appliances will repair, replace, or refund any defective product (at the sole discretion of Sage Appliances).

All legal warranty rights under applicable national legislation will be respected and will not be impaired by our guarantee. For full terms and conditions on the guarantee, as well as instructions on how to make a claim, please visit [www.sageappliances.com](http://www.sageappliances.com).

GBR

IRE

BRG Appliances Limited  
Unit 3.2, Power Road Studios, 114 Power Road, London, W4 5PY  
Freephone (UK Landline): +44 (0)808 178 1650  
Mobile Calls (National Rate): 0333 0142 970

**Sage**<sup>®</sup>

[www.sageappliances.com](http://www.sageappliances.com)

Registered in England & Wales No. 8223512.

• Due to continued product improvement, the products illustrated or photographed in this document may vary slightly from the actual product.  
Copyright BRG Appliances 2019.

SCP800 UG1 C19