

the Citrus Press™

BCP600 / SCP600



EN USER GUIDE

Sage®



Contents

- 2 Sage® Recommends Safety First
- 5 Components
- 6 Assembly
- 6 Functions
- 7 Care & Cleaning
- 7 Troubleshooting

SAGE® RECOMMENDS SAFETY FIRST

At Sage® we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- A downloadable version of this document is also available at sageappliances.com
- Before using the first time ensure your electricity supply is the same as shown on the label on the underside of the appliance.
- Remove and safely discard any packaging materials before first use.
- To eliminate a choking hazard for young children, safely discard the protective cover fitted to the power plug.
- This appliance is for household use only. Do not use the appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- Fully unwind the power cord before operating.
- Position the appliance on a stable, heat resistant, level, dry surface away from the edge and do not operate on or near a heat source such as a hot plate, oven or gas hob.
- Vibration during operation may cause the appliance to move.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- Always ensure the appliance is turned OFF, unplugged at the power outlet and has been allowed to cool before cleaning, attempting to move or storing.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.

- Do not use the appliance if the power cord, plug, or appliance becomes damaged in any way. If damaged or maintenance other than cleaning is required, please contact Sage Customer Service or go to sageappliances.com
- Any maintenance other than cleaning should be performed by an authorised Sage® service centre.
- Children should not play with the appliance.
- Cleaning of the appliance should not be carried out by children unless they are 8 years or older and supervised.
- The appliance and its cord should be kept out of reach of children aged 8 years and younger.
- The installation of a residual current safety switch is recommended to provide additional safety when using all electrical appliances. Safety switches with a rated operating current not more than 30mA are recommended. Consult an electrician for professional advice.
- Always ensure the appliance is properly assembled before use. The appliance will not operate unless properly assembled.
- Do not use the appliance on a sink drain board.
- Keep hands, fingers, hair, clothing as well as spatulas and other utensils away from moving or rotating parts during operation.
- Do not use the appliance for anything other than food and/or beverage preparation.
- In order to avoid the possible hazard of the appliance starting by itself due to inadvertent resetting of the overload protection, do not attach an external switching device (such as a timer) or connect the appliance to a circuit that can regularly switch the appliance on and off.
- Carefully read all instructions before operation and save for future reference.
- The appliance can be used by persons with reduced physical or mental capabilities or a lack of experience and knowledge, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance shall not be used by children.
- Allow the motor to rest for 1 minute between each use.
- Avoid placing hands or fingers near the hinge of the juice press arm when operating or moving the unit.



The symbol shown indicates that this appliance should not be disposed of in normal household waste.

It should be taken to a local authority waste collection centre designated for this purpose or to a dealer providing this service. For more information, please contact your local council office.

 
 
 
 
 


To protect against electric shock, do not immerse the power plug, cord or appliance in water or any liquid.


**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**



Components

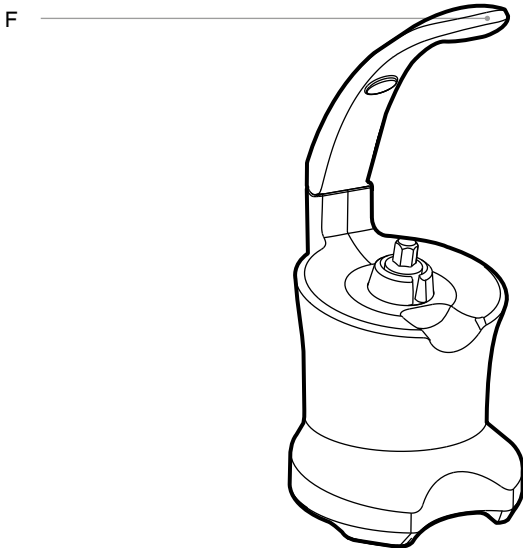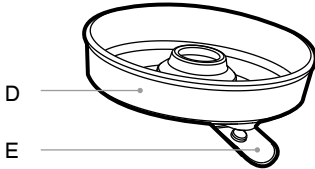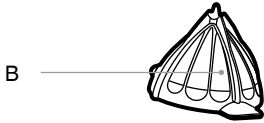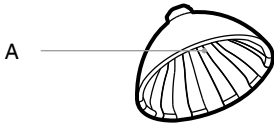

 - A. Fruit dome
- B. Juicing cone
- C. Juice filter
Dishwasher safe.
- D. Juice collector
Dishwasher safe.
- E. Juice spout
- F. Juice press arm
- G. ON/OFF switch
- H. Cord storage (not shown)
- I. Safety locking system (not shown)

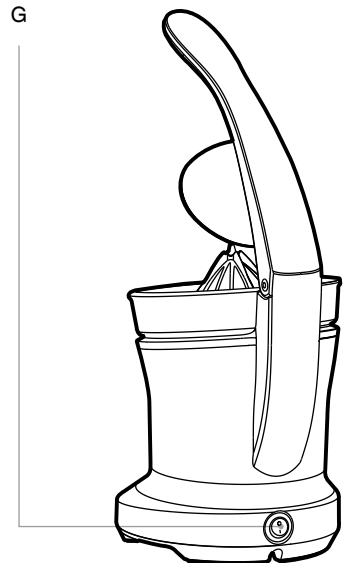

Rating Information
220-240V ~ 50Hz 110W



Assembly

ASSEMBLING THE JUICER

1. Pull the juice press arm up, away from the motor base, until fully extended.
2. Place the juice collector onto the drive shaft on top of the motor base, ensuring the juice spout fits into the semi-circular groove at the front of the motor base.
3. Insert the filter into the juice collector, aligning the indent with arrow in the bottom of the filter over the corresponding tab with arrow in the juice collector.
4. Place the juicing cone onto the drive shaft and press down lightly to lock the cone into position.
5. To insert the fruit dome, place it into the hole on the underside of the juice press arm. The fruit dome is magnetic and will stick into place.
6. Ensure the anti-drip juice spout is pushed down into the pouring position.

DISASSEMBLING THE JUICER

1. Turn the juicer OFF at the ON/OFF button, then unplug from the power outlet.
2. Pull the juice press arm up, away from the motor base, until fully extended. Close the anti drip spout by flipping it up.
3. Remove the fruit dome by pulling on it gently to release the magnet
4. Lift the juice collector from the base with the filter, juicing cone and fruit dome still in place. Remove the cone and filter from the juice collector over a sink for easier cleaning. Follow recommended care and cleaning guidelines.



Functions

1. Ensure the juicer is correctly assembled and a glass or jug is placed under the juice spout before juicing.
2. Cut the citrus fruit in half by cutting across the fruit segments, rather than across the tip ends, to ensure more efficient juicing.
3. Plug the power cord into a 220–240V power outlet, then press ON/OFF switch to ON.
4. Place a citrus fruit half, cut side down, onto the juice cone and push down lightly onto the spikes.
5. Grasp the handle and slowly lower the juice press arm. Press down (in a gentle but firm action) until the fruit dome is in contact with the fruit skin. The motor will automatically start and the juicing cone will begin to rotate. The juice will be extracted from the fruit and flow through the juice spout into the glass. The pulp and seeds will collect in the filter.
6. The juicer juices very quickly so each fruit half will be juiced in a few seconds. To automatically stop the motor, lift the juice press arm up to its extended position.
7. Remove the used fruit from the juicing cone. Empty excess pulp and seeds from the filter as required. Repeat Steps 3–7 to continue juicing.



NOTE

The filter should be emptied when full with pulp and seeds. The filter can be emptied during juicing by turning the juicer OFF at the ON/OFF switch and carefully removing the juicing cone and filter. Clean and replace filter and juicing cone before continuing to juice. Do not allow the filter to overfill as this may prevent correct operation or damage the unit.



Care & Cleaning

- Always ensure that the juicer is turned OFF at the ON/OFF switch and the plug is removed from the power outlet before cleaning, disassembling, assembling and storing the appliance.
- Follow these instructions to clean all surfaces or parts that come into contact with food during juicing.
- For easy cleaning immediately after each use rinse removable parts under warm water to remove wet pulp. Allow parts to air dry before reassembling.
- For thorough cleaning after disassembling the appliance, all removable parts should be washed in warm soapy water or on the top shelf of the dishwasher. The base and juice press arm should be wiped with a soft, damp cloth. All parts should be dried thoroughly before reassembling.
- Store the cleaned and reassembled juicer in an upright position in a cool, dry place. Do not place any items on top of the juicer while stored.



NOTE

- Never immerse the motor base in water or any other liquid. Do not use harsh abrasives.



Troubleshooting

POSSIBLE PROBLEM

EASY SOLUTION

Will not work

- Switch not in the ON position
- Juice press arm not lowered
- Juicing cone or fruit dome not assembled properly
- Filter not assembled properly
- Motor overload protection may have operated (see below)

Motor Overload Protection

- The juicer is fitted with an overload protector to prevent damage to the Motor. If the Motor suddenly stops working after heavy or long periods of use, turn OFF at the ON/OFF button, unplug from the wall and allow the unit to cool for 15 minutes. Once the unit is cooled you will be able to use the juicer again as normal.
NOTE: The unit MUST be unplugged from the supply to allow the protector to reset.
- Despite this overload protector we suggest juicing in smaller batches in order to protect the Motor.



Guarantee

2 YEAR LIMITED GUARANTEE

Sage Appliances guarantees this product for domestic use in specified territories for 2 years from the date of purchase against defects caused by faulty workmanship and materials. During this guarantee period Sage Appliances will repair, replace, or refund any defective product (at the sole discretion of Sage Appliances).

All legal warranty rights under applicable national legislation will be respected and will not be impaired by our guarantee. For full terms and conditions on the guarantee, as well as instructions on how to make a claim, please visit www.sageappliances.com.



Notes



Notes



Notes

GBR

BRG Appliances Limited
Unit 3.2, Power Road Studios,
114 Power Road, London, W4 5PY
Freephone (UK Landline): 0808 178 1650
Mobile Calls (National Rate): 0333 0142 970

DEU

AUT

Sage Appliances GmbH
Campus Fichtenhain 48, 47807 Krefeld,
Deutschland
Deutschland: 0800 505 3104
Österreich: 0800 80 2551

FRA

Sage Appliances France SAS
Siège social: 66 avenue des Champs
Élysées – 75008 Paris
879 449 866 RCS Paris
France: 0800 903 235

IRE

Ireland
1800 932 369

NLD

Netherlands
0800 020 1741

ITA

Italy
800 909 773

ESP

Spain
900 838 534

PTR

Portugal
0800 180 243

POL

Poland
00800 121 8713

BEL

Belgium
0800 54 155

CHE

Switzerland
0800 009 933

LUX

Luxembourg
800 880 72

DNK

Denmark
80 820 827

SWE

Sweden
0200 123 797

FIN

Finland
0800 412 143

NOR

Norway
80 024 976

Sage®

www.sageappliances.com

Registered in England & Wales No. 8223512
Registered in Germany No. HRB 81309 (AG Düsseldorf)
Registered in France No. 879 449 866 RCS

EN Due to continued product improvement, the products illustrated or photographed in this document may vary slightly from the actual product.

DE Aufgrund unserer kontinuierlichen Produktverbesserungen kann die hier gezeigte Abbildung geringfügig vom tatsächlichen Produkt abweichen.

FR En raison de leur amélioration continue, les produits représentés ou photographiés dans le présent document peuvent différer légèrement du produit réel.

NL Vanwege voortdurende productverbeteringen, kunnen de afgebeelde producten in dit document licht afwijken van het eigenlijke product.

IT A causa del continuo miglioramento dei prodotti, il prodotto descritto o illustrato in questo documento può variare leggermente rispetto al prodotto reale.

ES Perfeccionamos nuestros productos continuamente, por lo que el artículo podría diferir ligeramente de la ilustración o la fotografía en este documento.

PT Devido à melhoria contínua dos produtos, os produtos ilustrados ou fotografados neste documento podem variar ligeiramente do produto real.

PL Ze względu na stale przeprowadzane ulepszenia, produkty przedstawione na ilustracjach lub zdjęciach w tym dokumencie mogą różnić się od używanego produktu.

DA På grund af løbende produktudvikling kan de illustrerede eller fotograferede produkter i dette dokument variere en smule fra det faktiske produkt.

SV På grund av kontinuerlig produktförbättring kan produkterna som visas i illustrationerna och fotografierna i detta dokument skilja sig något från den faktiska produkten.

FI Jatkuvan tuotekehittelyn seurauksena kuvituksen tuotteet eivät välttämättä ole täysin samanlaisia kuin varsinaiset tuote.

NO På grunn av kontinuerlig produktutvikling kan produktene som er vist eller avfotografert i dette dokumentet, variere noe fra det faktiske produktet.

Copyright BRG Appliances 2022

BCP600 / SCP600 UK UG1 - B22