

the Risotto Plus™

SRC600



EN QUICK GUIDE

Sage®

2	We Recommend Safety First
7	Getting To Know Your New Appliance
8	Operating Your New Appliance
11	Slow Cooking
13	Rice Cooking Tables
14	Rice Variations
15	Steaming
19	Care & Cleaning
20	Troubleshooting
21	Guarantee

SAGE® RECOMMENDS SAFETY FIRST

At Sage® we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS

**READ ALL INSTRUCTIONS
BEFORE USE AND SAVE
FOR FUTURE REFERENCE**

- A downloadable version of this document is also available at sageappliances.com

- Before using for the first time please ensure that your electricity supply is the same as shown on the rating label on the underside of the appliance. If you have any concerns please contact your local electricity company.
- Remove and safely discard any packaging material and promotional labels before using the appliance for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this Risotto Plus™.
- Do not place the Risotto Plus™ near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water and other substances.
- Position the lid so that the steam vent is directed away from you. Lift and remove the lid carefully to avoid scalding from escaping steam.
- Always ensure the Risotto Plus™ is properly assembled before use. Follow the instructions provided in this book.
- Always operate the Risotto Plus™ on a stable and heat resistant surface.

WE RECOMMEND SAFETY FIRST

- Use the removable cooking bowl supplied with the Risotto Plus™. Do not use any other bowl inside the Risotto Plus™ housing.
- Do not use a damaged or dented removable cooking bowl. If damaged or dented, replace bowl before using.
- Do not operate the Risotto Plus™ on a sink drain board.
- Do not touch hot surfaces. Use the handle for lifting and carrying the Risotto Plus™.
- Do not use chemicals, steel wool, metal scouring pad or abrasive cleaners to clean the outside of the Risotto Plus™ housing or cooking bowl as these can damage the housing or the coating of the cooking bowl.
- Keep the Risotto Plus™ clean. Follow the cleaning instructions provided in this book.
- Never plug in or switch on the Risotto Plus™ without having the removable cooking bowl placed inside the Risotto Plus™ housing.
- Do not place food or liquid in the Risotto Plus™ housing. Only the removable cooking bowl is designed to contain food or liquid.
- Never operate the Risotto Plus™ without food and liquid in the removable cooking bowl.
- Do not touch hot surfaces, use oven mitts to remove the lid and or removable cooking bowl. Lift and remove the lid carefully and away from yourself to avoid scalding from escaping steam.
- Do not allow water from the lid to drip into the Risotto Plus™ housing, only into the removable cooking bowl.
- Do not leave the Risotto Plus™ unattended when in use.
- Extreme caution must be used when the Risotto Plus™ contains hot food and liquids. Do not move the appliance during cooking.
- The temperature of accessible surfaces will be high when the Risotto Plus™ is operating and for some time after use.
- Do not place anything, other than the lid, on top of the Risotto Plus™ when assembled, when in use and when stored.
- Always insert the connector end of the power cord into the appliance inlet before inserting power plug into the power outlet and switching on appliance. Ensure the appliance inlet is completely dry before inserting the connector end of the power cord.

WE RECOMMEND SAFETY FIRST

- To prevent scratching the non-stick surface of the removable cooking bowl, always use wooded or plastic utensils. Always position steam vent on lid away from yourself to avoid scalding from escaping steam.
- Ensure the removable cooking bowl is correctly positioned in the Risotto Plus™ base before you commence cooking.
- The appliance connector must be removed before the Risotto Plus™ is cleaned and that the appliance inlet must be dried before the Risotto Plus™ is used again.
- To prevent damage to the Risotto Plus™ do not use alkaline cleaning agents when cleaning, use a soft cloth and mild detergent.
- Always have the glass lid placed correctly into position on the appliance throughout operation of the appliance unless states in the recipe to have it removed.
- The glass lid has been specially treated to make it stronger, more durable and safer than ordinary glass, however it is not unbreakable. If struck extremely hard, it may break or weaken, and could at a later time shatter into many small pieces without apparent cause.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Connect only to 220–240V power outlet.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use the appliance if power cord, power plug or appliance becomes damaged in any way. If damaged or maintenance other than cleaning is required, please contact Sage Customer Service or go to sageappliances.com
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
Misuse may cause injury.
- To ensure continued protection against risk of electric shock, connect to properly grounded outlets only.
- The installation of a residual current device (safety switch) is recommended to provide

WE RECOMMEND SAFETY FIRST

additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of

experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
- Keep the appliance and its cord out of reach of children aged less than 8 years.
- Regularly inspect the supply cord, plug and actual appliance for any damage. If found damaged in any way or maintenance other than cleaning is required, immediately cease use of the appliance and contact Sage Customer Service or go to sageappliances.com

IMPORTANT

Fully unwind the cord before use. Ensure appliance is fully cooled before storing power cord inside removable cooking bowl.

WE RECOMMEND SAFETY FIRST



The symbol shown indicates that this appliance should not be disposed of in normal household waste. It should be taken to a local authority waste collection centre designated for this purpose or to a dealer providing this service. For more information, please contact your local council office.



To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow moisture to come in contact with the part, unless it is recommended in the cleaning instructions.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**

GETTING TO KNOW YOUR NEW APPLIANCE



- A. Tempered domed glass lid
- B. Removable non-stick cooking bowl
- C. Cool-touch handles
- D. Removable power cord (not shown)
- E. RISOTTO setting
- F. SAUTÉ / SEAR setting
- G. RICE / STEAM setting

- H. LOW SLOW COOK setting
- I. HIGH SLOW COOK setting
- J. KEEP WARM
- K. START / CANCEL button
- L. Stainless steel steaming tray
- M. Rice scoop and serving spoon



Rating Information

220-240V ~ 50-60Hz 640-760W

OPERATING YOUR NEW APPLIANCE

BEFORE FIRST USE

Before first use, remove all packaging material and promotional labels and wash the non-stick removable cooking bowl, stainless steel steaming tray and glass lid in hot soapy water, rinse and dry thoroughly.

HOW TO MAKE RISOTTO

SAUTÉ / SEAR setting

1. Ensure exterior of the removable cooking bowl is clean before placing it in the housing (this will ensure proper contact with the inner cooking surface).
2. Plug power cord into a 220–240V power outlet. The START / CANCEL button and RISOTTO button surround will illuminate in white.
3. Press the SAUTÉ / SEAR button, the button surround will illuminate in white. Press the START / CANCEL button to activate the setting, the button surround will illuminate red.
4. Cover with lid and allow to pre-heat for approximately 2–3 minutes (do not pre-heat for longer than 5 minutes).
5. Add oil / butter and allow to heat / melt for approximately 1 minute.
6. If using chicken or seafood in the recipe, sear in small batches, cover with lid and stir occasionally until food is cooked. Remove from cooking bowl.
7. Add extra oil / butter to cooking bowl if necessary or if recipe states. Allow to heat for approximately 1 minute.
8. Add ingredients such as onions and garlic. Sauté, cover with lid if necessary and stir occasionally for about 4 to 5 minutes or until cooked to desired brownness.
9. Stir in Arborio or Carnaroli rice and mix well. Sauté for approximately 2–3 minutes, stirring occasionally.
10. Pour in wine (if using) and cook uncovered until rice has absorbed all liquid and alcohol has evaporated, stirring frequently.
11. Press the START / CANCEL button to stop the SAUTÉ / SEAR setting.
12. Refer to step 1 in the RISOTTO setting section below.

RISOTTO Setting

1. Follow steps 1–11 in the SAUTÉ / SEAR setting section above.
2. Add stock or water and stir well. Cover with lid and press the RISOTTO button, then press the START / CANCEL button to activate the setting. The START / CANCEL button surround will illuminate red and cooking will commence.
3. Allow to cook until the ready beeps sound and the Risotto Plus™ automatically switches to the KEEP WARM setting. This will take approximately 20–30 minutes depending on the recipe.
4. Remove lid and stir well using the serving spoon provided.
5. The Risotto Plus™ will remain on the KEEP WARM setting for 30 minutes before switching OFF. However, risotto is best served as soon as possible after completion of cooking.

NOTE

There may be occasions when the Risotto Plus™ switches to the KEEP WARM setting or switches off before cooking is complete. If this occurs, simply press the desired cooking button, then press the START/CANCEL button. The START/CANCEL button surround will illuminate red and the selected setting will be activated. This is a safety mechanism to prevent overheating due to certain cooking conditions.

TIPS


- Allow the risotto to rest in the KEEP WARM setting for 5 or 10 minutes to finish cooking.
- For optimum risotto results, we recommend you stir once after 15–20 minutes in the RISOTTO setting.

OPERATING YOUR NEW APPLIANCE

HOW TO MAKE RICE

RICE / STEAM setting

1. Use the Risotto Plus™ rice scoop provided to measure the required quantity of rice. Always measure level scoops, not heaped.
2. Place measured rice into a separate bowl and wash with cold water to remove any excess starch. The rice is ready for cooking when water runs clear from the rice. Drain well.
3. Ensure the exterior of the removable cooking bowl is clean before placing it in the housing (this will ensure proper contact with the inner cooking surface) (Fig 1).

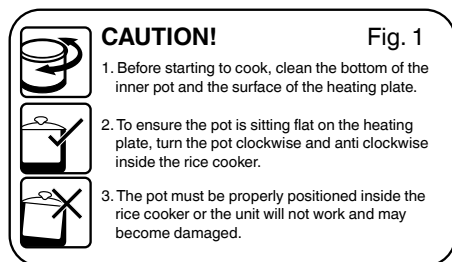

CAUTION!

Fig. 1

1. Before starting to cook, clean the bottom of the inner pot and the surface of the heating plate.
2. To ensure the pot is sitting flat on the heating plate, turn the pot clockwise and anti clockwise inside the rice cooker.
3. The pot must be properly positioned inside the rice cooker or the unit will not work and may become damaged.

4. Add the washed rice to the removable cooking bowl, ensuring rice is spread evenly across the bottom of the bowl and not heaped to one side.
5. Add water using the following ratios:
White Rice =
1 scoop rice : 1 scoop water.
Brown Rice =
1 scoop rice : 1½ scoops water.
6. Place the glass lid into position.
7. Plug power cord into 220–240V power outlet. The START / CANCEL button and RISOTTO button surround will illuminate in white.
8. Press the RICE / STEAM button, then press the START / CANCEL button to activate the setting. The START / CANCEL button surround will illuminate red and cooking will commence.
9. When cooking is complete, the ready beeps will sound and the Risotto Plus™ will automatically switch to the KEEP WARM setting for up to 5 hours.

10. Open the lid and turn the rice over with the serving spoon provided. Replace the lid and allow the rice to stand for 10–15 minutes before serving. This allows any excess moisture to be absorbed, resulting in a fluffier rice texture.

NOTE

After using the RICE setting the appliance will automatically switch to the KEEP WARM setting for up to 5 hours.

NOTE

Do not remove the glass lid until ready to serve (except for when turning over rice after cooking is complete or as suggested in the recipes).

NOTE

To stop the KEEP WARM setting, unplug the power cord.

IMPORTANT

Do not interfere with the automatic selector control during operation.

- ***Always place liquid into the removable cooking bowl before pressing the START/CANCEL button.***
- ***To prevent scratching the non-stick surface of the removable cooking bowl, always use wooden or plastic utensils.***
- ***Ensure the removable cooking bowl is correctly positioned in the appliance base before you commence cooking.***

OPERATING YOUR NEW APPLIANCE

WARNING

- *Before removing the non-stick cooking bowl from housing, always ensure the power cord is unplugged. Always ensure appliance is switched off at the power outlet and power cord is unplugged.*
- *Always use heat protective gloves or oven mitts when removing the lid and the non-stick cooking bowl from the appliance.*
- *Always position steam vent on lid away from yourself to avoid scalding from escaping steam.*
- *Always lift and remove the lid carefully, angling it away from yourself to avoid scalding from escaping steam.*
- *To ensure continued protection against risk of electric shock, connect to properly grounded outlets only.*
- *Cook only in removable non-stick cooking bowl.*
- *Do not use a damaged or dented removable cooking bowl. If damaged or dented, replace bowl before using.*

NOTE

The Risotto Plus™ rice scoop is not a standard metric measuring cup.

1 Risotto Plus™ rice scoop is equal to 150g of uncooked rice and 180ml of water. If your Risotto Plus™ rice scoop is lost or misplaced, use another cup but maintain the same cooking ratios and ensure you do not exceed the 10 scoop maximum line in the removable cooking bowl:

White Rice = 1 scoop rice + 1 scoop water

Brown Rice = 1 scoop rice + 1½ scoops water

} Using the Risotto Plus™ rice scoop

SLOW COOKING

HOW TO SLOW COOK

SEAR Setting

Searing in the Risotto Plus™ may take a little extra time and whilst not strictly necessary, the rewards are evident in the end result.

The cooking bowl keeps the heat stable and uniform allowing the meat to brown and form an even crust. Plus searing seals in the moisture, intensifies the flavour and provides more tender results.

1. Ensure exterior of the removable cooking bowl is clean before placing it in the housing (this will ensure proper contact with the inner cooking surface).
2. Plug power cord into a 230V power outlet. The START/CANCEL button and RISOTTO button surround will illuminate in white.
3. Press the SAUTÉ/SEAR button, the button surround will illuminate white. Press the START/CANCEL button to activate the setting, the button surround will illuminate red.
4. Cover with lid and allow to pre-heat for approximately 2–3 minutes (do not preheat for longer than 5 minutes).
5. Add oil/butter and allow to heat/ melt for approximately 1 minute with the lid on.
6. Always sear meat and poultry in small batches. Cover with lid and cook, stirring occasionally until food is evenly browned. Remove from cooking bowl. When finished searing, proceed to the Slow Cook Settings section below.

Slow Cook Settings

The Risotto Plus™ has two slow cook settings: Low and High. Use the recommended guidelines below to determine cooking time and heat settings and use recipes in this instruction book.

Dishes can be prepared well in advance and cooking time regulated so that food is ready to serve at a convenient time. A general rule of thumb for most slow cooked meat and vegetable recipes is:

Setting Cooking Time

LOW: 6–7 hours

HIGH: 3–4 hour

Your favourite traditional recipes can also be easily adapted to this slow cooker. Simply halve the amount of liquid and increase the cooking time.

NOTE

These cooking times are approximate only and times can vary depending on ingredients, quantities in recipes and whether the cooking bowl and its ingredients are hot from searing.

As a guide meats such as chicken or small pieces of meat will have best results when cooked on high for 3–4 hours. Larger pieces of meat such as lamb shanks will have best results when cooked on low for 6–7 hours.

Cooking Times (with Searing)

When the SAUTÉ/SEAR setting is used prior to slow cooking, cooking times will be shortened slightly. Check for doneness intermittently during cooking.

Low or High Slow Cook Settings

When the SAUTÉ/SEAR setting is used prior to slow cooking, cooking times will be shortened slightly. Check for doneness intermittently during cooking.

1. Add all ingredients into the cooking bowl, ensuring denser foods are spread evenly across the bottom of the bowl and not heaped to one side and the
2. liquid level is between MIN and MAX markings on the bowl.
3. Place the glass lid into position.
4. Press the LOW SLOW COOK OR HIGH SLOW COOK button, then press the START/CANCEL button to activate the setting. The START/CANCEL button surround will illuminate red and cooking will commence.
5. Allow to cook until the ready beeps sound. The unit then automatically switches to KEEP WARM setting.
6. The Risotto Plus™ will remain on the KEEP WARM setting for 5 hours before switching OFF.

SLOW COOKING

The Sage Risotto Plus™ is designed specifically for flavour layering. A technique professional chefs use to enhance and deepen the taste of meals by using the same pan for browning onions, searing meats and creating casseroles, curries, soups and bolognese.

For this reason, Sage® have now developed a SLOW COOK with a SAUTÉ/SEAR setting to caramelise vegetables and sear meats before commencing the slow cooker function.

Following is a guide to help simplify the process of slow cooking, allowing you to obtain optimum results from your Risotto Plus™. We have also included helpful hints for successful slow cooking.

PREPARING MEAT AND POULTRY

Select the freshest cuts when purchasing meat. Trim the meat or poultry of any visible excess fat. If possible, purchase chicken portions without the skin. Otherwise, the slow cooking process will result in extra liquid being formed from the fat as it melts. For casserole type recipes, cut the meat into cubes, approximately 4cm to 5cm.

Slow cooking allows less tender cuts of meat to be used. The bones can be left in meat or poultry. This imparts a good flavour and helps to keep the meat tender during cooking.

SUITABLE MEAT CUTS FOR SLOW COOKING

Beef chuck, skirt, round steak, boneless shin (gravy) beef, bone-in-shin (osso bucco), tri tip.

Lamb shanks, drumsticks (frenched shanks), neck chops, boned out forequarter or shoulder.

Veal diced leg, shoulder/forequarter chops and steaks, neck chops, knuckle (osso bucco).

Pork leg steaks, diced belly, diced shoulder, boneless loin chops.

Chicken pieces bone in (thigh cutlets / drumsticks).

Chicken thigh fillets.

PREPARING VEGETABLES

Vegetables should be cut into even-sized pieces to ensure more even cooking. Frozen vegetables must be thawed before adding to other foods cooking in the Risotto Plus™.

RICE COOKING TABLES

The rice scoop provided with your Risotto Plus™ is used in the following tables.

NOTE

The Risotto Plus™ rice scoop is not a standard metric measuring cup.
1 Risotto Plus™ rice scoop is equal to 150g of uncooked rice and 180ml of water.
If your Risotto Plus™ rice scoop is lost or misplaced, use another cup but maintain the same cooking ratios and ensure you do not exceed the 10 scoop maximum line in the removable cooking bowl:

White Rice = 1 scoop rice + 1 scoop water
Brown Rice = 1 scoop rice + 1½ scoops water

} Using the Risotto Plus™ rice scoop

White Rice

UNCOOKED WHITE RICE (RISOTTO PLUS RICE SCOOPS)	COLD TAP WATER (RISOTTO PLUS RICE SCOOPS)	COOKED RICE – APPROX. (RISOTTO PLUS RICE SCOOPS)	COOKING TIME – APPROX. (MINUTES)
2	2	5	10–12
4	4	9	12–15
6	6	15	15–20
8	8	16	20–25
10	10	27	25–30

Brown Rice

UNCOOKED WHITE RICE (RISOTTO PLUS RICE SCOOPS)	COLD TAP WATER (RISOTTO PLUS RICE SCOOPS)	COOKED RICE – APPROX. (RISOTTO PLUS RICE SCOOPS)	COOKING TIME – APPROX. (MINUTES)
2	3	5	25–30
4	6	10	30–40
6	9	15	40–45

NOTE

Due to the additional water needed to cook brown rice, some starchy water bubbles may rise to the lid while cooking.

RICE VARIATIONS

SAVOURY RICE

Prepare rice in the Risotto Plus™ as specified, substituting all the water with the same quantity of chicken, beef, fish, or vegetable stock.

SWEET RICE

Prepare rice in the Risotto Plus™ as specified substituting half the water with apple juice, orange juice or pineapple juice. Cooking rice with milk or cream is not recommended as it will burn onto the bottom of removable cooking bowl.

SAFFRON RICE

Add ¼ teaspoon of saffron powder or 2 saffron threads to every 2 cups of water. Use the white rice cooking tables. Mix well.

ARBORIO RICE

Arborio rice is short round-grained pearly rice often used for Italian risotto cooking. Use the brown rice cooking tables.

JASMINE RICE

Jasmine rice is fragrant long grain rice. Use the white rice cooking tables.

BASMATI RICE

Basmati rice is an aromatic long grain rice. Use the white rice cooking tables.

WILD RICE

It is not recommended to cook wild rice alone in the Risotto Plus™ as it requires a substantial amount of water. It is possible to cook wild rice as a blend with white or brown rice.

TIP

- Add a little extra water for fluffier rice and a little less water for firmer rice.
- Some rice varieties may require more water for cooking, such as wild rice blends, Arborio rice or short grain rice. Follow the directions on the packet or use the brown rice cooking table.

QUINOA

Quinoa is an ancient South American grain that is high in protein with fluffy, creamy and slightly crunchy texture. Use the brown rice cooking tables.

SUSHI

Sushi rice is short grained rice used in Japanese cooking. Use the brown rice cooking tables.

STEAMING

Steamed foods retain most of their nutritional value when cooked in the Risotto Plus™. Foods may be steamed by placing food in the stainless steel steaming tray over stock or water and covering with the glass lid. Keep the glass lid on while steaming food unless the recipe or chart specifically states to remove the lid. By removing the lid unnecessarily steam is lost and the cooking time will be extended.

1. Measure 3 rice scoops or more of water or stock and pour into the removable cooking bowl. Use up to a maximum of 6 rice scoop cups of water.
2. Place food to be steamed directly into the stainless steel steaming tray and insert into the removable cooking bowl. (Refer to the Steaming Charts on pages 20–22 for approximate cooking times).
3. Place removable cooking bowl with the steaming tray into housing and cover with the glass lid.
4. Plug power cord into a 230V power outlet. The START/CANCEL button and RISOTTO button surround will illuminate in white.
5. Press the RICE/STEAM setting then press the START/CANCEL button to activate the setting. The START/CANCEL button surround will illuminate red and cooking will commence.
6. When steaming is complete, the ready beeps will sound and the Risotto Plus™ will automatically switch to the KEEP WARM setting.
7. If no further steaming is required, press the START/CANCEL button to cease operation and turn the Risotto Plus™ off at the power outlet and then unplug power cord. Allow to cool before cleaning.

NOTE

Keep the glass lid on while steaming food unless the recipe or chart specifically states to remove the lid. (By removing the lid unnecessarily, steam is lost and the cooking time will be extended.)

NOTE

Do not let the removable cooking bowl boil dry during steaming.

NOTE

Hot liquid can be added during the steaming process.

HINTS AND TIPS FOR STEAMING VEGETABLES

- Smaller pieces will steam faster than larger pieces.
- Try to keep vegetables to a standard size to ensure even cooking.
- Fresh or frozen vegetables may be steamed.
- If steaming frozen vegetables, do not thaw.
- The size and shape of vegetables, as well as personal taste, may call for adjustments to the cooking time. If softer vegetables are required, allow extra cooking time.
- Do not allow water or stock to reach the stainless steel tray. The steaming will not be effective.



WARNING

Always lift and remove the lid carefully, angling it away from yourself to avoid scalding from escaping steam.

STEAMING

VEGETABLES	PREPARATION & TIPS	QUANTITY	COOKING TIME
Artichoke	remove hard outer leaves & stalk	2 medium	30–35
Asparagus	trim, leave as spears	2 bunches	12–14
Beans	top and tail, leave whole	250g	13–15
Beets	trim, do not break skin	300g	12–13
Peppers	cut into strips	3 medium	14–16
Broccoli	cut into florets	250g	8–10
Brussel Sprouts	cut a cross in the base	375g	17–19
Cabbage	large pieces	500g	10–12
Carrots	cut into strips	3 medium	14–16
Celery	slice into strips	3 stalks	5–6
Chickpeas	soak for 12 hours	1 cup dried	40–45
Corn	whole corn cobs	2 small cobs	20–22
Courgette	sliced	350g	6
Mushrooms	whole, unwashed	300g	8–10
Onions	peeled, leave whole	6 medium	20–25
Mangetout	topped and tailed	250g	4–5
Peas	fresh, peeled frozen	250g 250g	8–10 4–5
Potatoes	all purpose, whole	4 (150–180g each)	35–40
Potatoes	new, whole	6 (125g each)	25–30
Sweet Potato	cut into pieces	300g	20–25
Spinach	leaves and stems cleaned	½ bunch	5
Squash (baby)	topped and tailed	350g	8
Turnips	peeled, sliced & cut to 50g pieces	350g	15–17

STEAMING

HINTS AND TIPS FOR STEAMING FISH AND SEAFOOD

- Season fish with fresh herbs, onions, lemon etc. before cooking.
- Ensure fish fillets are in a single layer and do not overlap.
- Fish is cooked when it flakes easily with a fork and is opaque in colour.

TYPE	SUGGESTIONS AND TIPS	COOKING TIME (MINUTES)
Fish – fillets – whole – cutlets	Steam until opaque and easy to flake. A cutlet is cooked when the centre bone is able to be easily removed	8–10 15–20 12–14
Lobster – tails	Remove underside of shell	18–20
Mussels – in shell	Steam until just opened	12–14
Clams	Steam until just opened	8–10
Prawns - in shell	Steam until pink	8–10
Scallops	Steam until opaque	4–6

HINTS AND TIPS FOR STEAMING POULTRY

- Select similar sized pieces of poultry for even cooking.
- For even cooking results arrange poultry in a single layer.
- Remove visible fat and skin.
- To obtain a browned appearance, sear the chicken before steaming.
- Check poultry is cooked by piercing the thickest part. The poultry is cooked when the juices run clear.

TYPE	SUGGESTIONS AND TIPS	COOKING TIME (MINUTES)
Breast fillet	Place skin side up	20–25
Drumstick	Place thickest part to outside of the steaming tray	30–35
Thigh fillet	Place thickest part to outside of the steaming tray	18–20

STEAMING

HINTS AND TIPS FOR STEAMING DUMPLINGS

- Fresh or frozen dumplings and savoury buns can be steamed.
- Place small pieces of baking paper, or cabbage or lettuce leaves, under the dumplings to avoid sticking to the steaming tray.

TYPE	SUGGESTIONS AND TIPS	COOKING TIME (MINUTES)
BBQ pork or chicken buns	Cook from frozen	10–12
Dumplings – frozen	Separate before cooking	8–10
Dumplings – fresh		5–6

KEEP WARM SETTING

The Risotto Plus™ will automatically switch to the KEEP WARM setting once the RICE, RISOTTO and SLOW COOK settings have finished cooking. It will keep KEEP WARM for up to 5 hours on the RICE and SLOW COOK settings and up to 30 minutes on the RISOTTO setting.

CARE & CLEANING

Unplug the power cord from the power outlet.

Allow all parts to cool before removing the removable cooking bowl. Wash the removable cooking bowl, stainless steel steaming tray and glass lid in hot, soapy water, rinse and dry thoroughly.

We do not recommend that any parts of your Risotto Plus™ are washed in a dishwasher as harsh detergents and hot water temperatures may stain or distort the removable cooking bowl and accessories.

Do not use abrasive cleaners, steel wool, or metal scouring pads as these can damage the non-stick surface.

The housing can be wiped over with a damp cloth and then dried thoroughly.

To prevent damage to appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

NOTE

If rice has cooked onto the bottom of the removable cooking bowl, fill the bowl with hot, soapy water and leave to stand for approximately 10 minutes before cleaning.



WARNING

The appliance connector must be removed before the Risotto Plus™ is cleaned and that the appliance inlet must be dried before the Risotto Plus™ is used again.

To prevent damage to the Risotto Plus™ do not use alkaline cleaning agents when cleaning, use a soft cloth and mild detergent.

Do not use chemicals, steel wool, metal scouring pad or abrasive cleaners to clean the outside of the Risotto Plus™ housing or cooking bowl as these can damaged the housing or the coating of the cooking bowl.

Do not immerse housing or power cord in water or any other liquid as this may cause electrocution.

TROUBLESHOOTING

PROBLEM	WHAT TO DO
The Risotto Plus™ suddenly switches off.	<ul style="list-style-type: none">• Ensure power plug is connected properly to the appliance and to power outlet.• The appliance has been stressed or has overheated due to cooking conditions. Push the desired cooking button and then the START / CANCEL button to reset and continue cooking. Allow a few minutes for appliance to reheat and continue cooking.
The Risotto Plus™ has switched to KEEP WARM setting before cooking is complete.	<ul style="list-style-type: none">• Press the START / CANCEL button to reset. Then, select the desired cooking method to continue cooking.

GUARANTEE

2 YEAR LIMITED GUARANTEE

Sage Appliances guarantees this product for domestic use in specified territories for 2 years from the date of purchase against defects caused by faulty workmanship and materials. During this guarantee period Sage Appliances will repair, replace, or refund any defective product (at the sole discretion of Sage Appliances).

All legal warranty rights under applicable national legislation will be respected and will not be impaired by our guarantee. For full terms and conditions on the guarantee, as well as instructions on how to make a claim, please visit www.sageappliances.com.

NOTES

GBR

BRG Appliances Limited
Unit 3.2, Power Road Studios,
114 Power Road, London, W4 5PY
Freephone (UK Landline): 0808 178 1650
Mobile Calls (National Rate): 0333 0142 970

DEU

AUT

Sage Appliances GmbH
Campus Fichtenhain 48, 47807 Krefeld,
Deutschland
Deutschland: 0800 505 3104
Österreich: 0800 80 2551

FRA

Sage Appliances France SAS
Siège social: 66 avenue des Champs
Élysées – 75008 Paris
879 449 866 RCS Paris
France: 0800 903 235

IRE

Ireland
1800 932 369

NLD

Netherlands
0800 020 1741

ITA

Italy
800 909 773

ESP

Spain
0900 838 534

PTB

Portugal
0800 180 243

POL

Poland
00800 121 8713

BEL

Belgium
0800 54 155

CHE

Switzerland
0800 009 933

LUX

Luxembourg
0800 880 72

DNK

Denmark
80 820 827

SWE

Sweden
0200 123 797

FIN

Finland
0800 412 143

NOR

Norway
80 024 976

Sage®

www.sageappliances.com

Registered in England & Wales No. 8223512
Registered in Germany No. HRB 81309 (AG Düsseldorf)
Registered in France No. 879 449 866 RCS

EN Due to continued product improvement, the products illustrated or photographed in this document may vary slightly from the actual product.

DE Aufgrund unserer kontinuierlichen Produktverbesserungen kann die hier gezeigte Abbildung geringfügig vom tatsächlichen Produkt abweichen.

FR En raison de leur amélioration continue, les produits représentés ou photographiés dans le présent document peuvent différer légèrement du produit réel.

NL Vanwege voortdurende productverbeteringen, kunnen de afgebeelde producten in dit document licht afwijken van het eigenlijke product.

IT A causa del continuo miglioramento dei prodotti, il prodotto descritto o illustrato in questo documento può variare leggermente rispetto al prodotto reale.

ES Perfeccionamos nuestros productos continuamente, por lo que el artículo podría diferir ligeramente de la ilustración o la fotografía en este documento.

PT Devido à melhoria continua dos produtos, os produtos ilustrados ou fotografados neste documento podem variar ligeiramente do produto real.

PL Ze względu na stale przeprowadzane ulepszenia, produkty przedstawione na ilustracjach lub zdjęciach w tym dokumencie mogą różnić się od używanego produktu.

DA På grund af løbende produktudvikling kan de illustrerede eller fotograferede produkter i dette dokument variere en smule fra det faktiske produkt.

SV På grund av kontinuerlig produktförbättring kan produkterna som visas i illustrationerna och fotografierna i detta dokument skilja sig något från den faktiska produkten.

FI Jatkuvan tuotekehittelyn seurauksena kuvituksen tuotteet eivät välttämättä ole täysin samanlaisia kuin varsinaiset tuote.

NO På grunn av kontinuerlig produktutvikling kan produktene som er vist eller avfotografert i dette dokumentet, variere noe fra det faktiske produktet.

Copyright BRG Appliances 2022

SRC600 UK UG1 B22